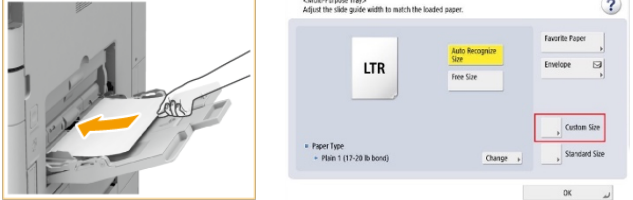

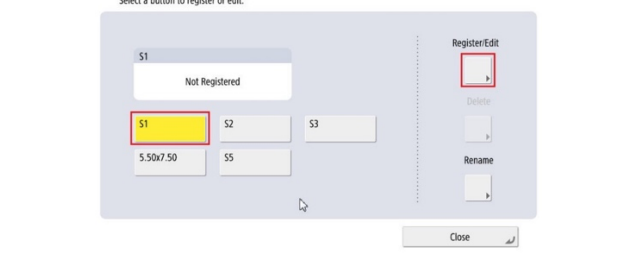
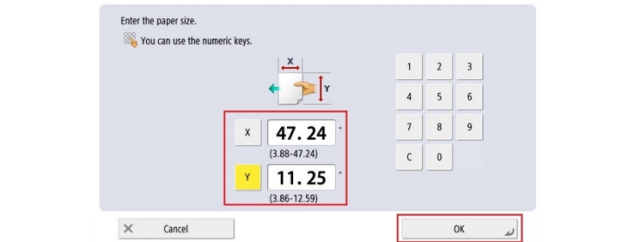
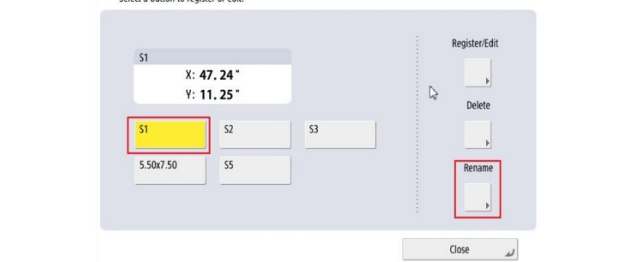




## Canon ImageRUNNER Advance DX: Print Banners from Mac OS 13 & Up

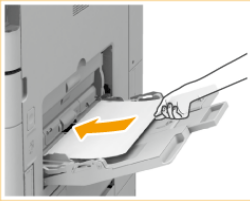
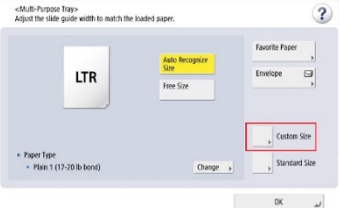
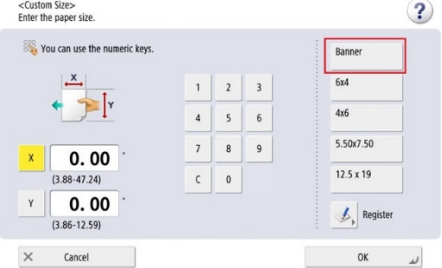
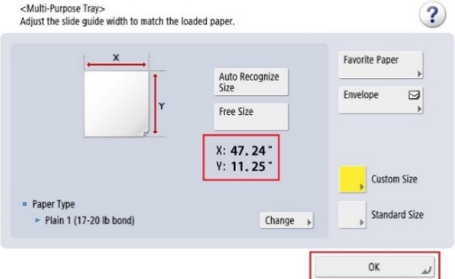
This guide will go over how to register custom paper sizes at the machine & print driver for banners, as well as how to print them. The custom sizes **MUST** be entered at the machine and print driver before printing.

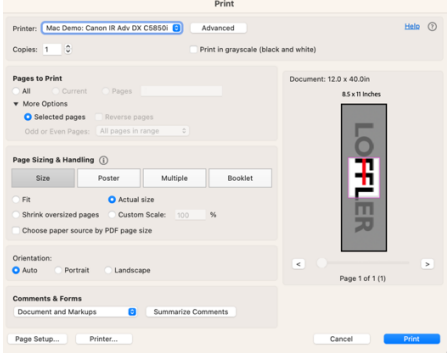
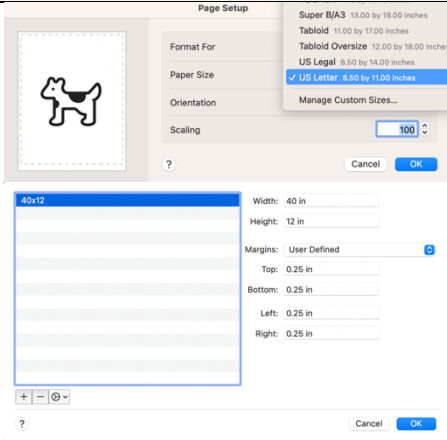
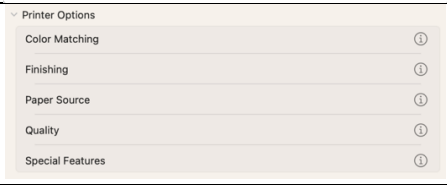
### Register Banner Size Paper in the Multipurpose Tray:

<ol style="list-style-type: none"> <li>1. Insert any size paper into the multipurpose tray to open the multipurpose tray's <b>Custom Size</b></li> <li>2. Select the <b>Custom Size</b> button to register the banner paper size.</li> </ol>	
<ol style="list-style-type: none"> <li>3. Select the <b>Register</b> button <b>Register Banner Size Paper in the Multipurpose Tray</b>.</li> </ol>	
<ol style="list-style-type: none"> <li>4. Select an unregistered button, then select <b>Register/Edit</b>.</li> </ol>	
<ol style="list-style-type: none"> <li>5. Enter the dimensions of the banner paper in the <b>X</b> and <b>Y</b> fields.</li> <li>6. Select <b>OK</b> to register the paper.</li> </ol>	
<ol style="list-style-type: none"> <li>7. Rename the newly registered button. Select the button, then select <b>Rename</b>.</li> </ol>	

<p>8. Enter the name of the paper registered; in this case, Banner, and select <b>OK</b>.</p>	
<p>9. Banner paper size will now be available to select when setting up the multipurpose tray for banner printing.</p>	

**Printing on Banner Size Paper: Part 1** at the copier, setting up the multipurpose tray with banner paper. **Part 2** at the computer, accessing the print driver.

<p>1. Insert any size paper into the multipurpose tray to open the multipurpose tray's <b>Custom Size</b> display window</p> <p><i>*Note: it is helpful to have a second person to hold the banner paper straight as it feeds into the machine.</i></p>	 
<p>2. Select the <b>Custom Size</b> button to access the registered banner paper size</p> <p>3. Select the registered <b>Banner paper</b> button</p> <p>4. Select <b>OK</b> to close the <b>Custom Size</b> window</p>	
<p>5. Select <b>OK</b> to close the multipurpose tray window</p>	

<p><b>6. Select the printer and click <b>Page Setup</b>.</b></p>	
<p><b>7. Select correct <b>Paper Size</b>.</b></p> <ul style="list-style-type: none"> <li>• If size is not registered, it will have to be added to the list by clicking <b>Manage Custom Sizes...</b> <ul style="list-style-type: none"> <li>▪ Create and rename size by pressing the <b>+</b> in the lower left-hand corner.</li> <li>▪ Click <b>OK</b>.</li> </ul> </li> <li>• Once added, new size will appear in the <b>Paper Size</b> list under <b>Custom Papers</b> to choose from.</li> </ul>	
<p><b>8. Select the <b>Paper Source</b> under <b>Printer Options</b>.</b></p>	
<p><b>9. Change the <b>Paper Source</b> to <b>Multi-purpose Tray</b>.</b>  <b>10. Click <b>OK</b>.</b>  <b>11. Once all settings are chosen, <b>Print</b>.</b></p>	