



Konica Minolta Bizhub iSeries: Print Banners from MAC

This guide will cover how to print banners from a MAC.

Printing on Banner Paper

Printing on banner paper

This machine accommodates paper with a length of up to 47-1/4 inches (1,200 mm) in the **Bypass Tray**.



Printable paper

Paper width	Paper length	Paper weight
8-1/4 to 11-11/16 inches (210 to 297 mm)	18 to 47-1/4 inches (457.3 to 1200 mm)	33-13/16 to 55-7/8 lb (127 g/m ² to 210 g/m ²) (Using the printer driver, select the paper type appropriate for the weight of the banner paper to be used. 32-3/16 lb to 41-3/4 lb (121 g/m ² to 157 g/m ²): Thick 1+, Thick 1+ (Side 2) 42 lb to 55-5/8 lb (158 g/m ² to 209 g/m ²): Thick 2, Thick 2 (Side 2) 55-7/8 lb (210 g/m ²): Thick 3, Thick 3 (Side 2))


Tips

- When printing data on banner paper, select a paper type appropriate to the banner paper using the printer driver. Then, the [Paper Tray] is set to [Bypass Tray] and [Resolution] is fixed to [600dpi].



1. On the Touch Panel of the machine, select **Utility** → **Banner Printing**.


2. Select **Allow**, then select **OK**.

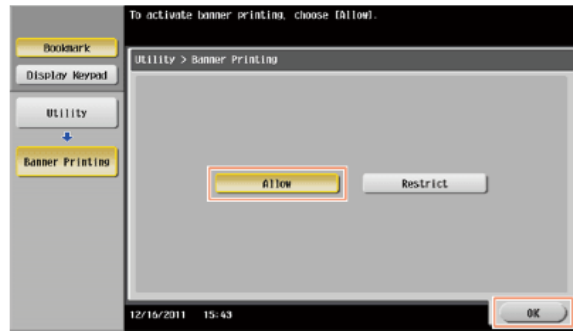

3. Check that the screen waiting for the banner printing job has appeared.


Note: When banner printing is enabled, any jobs printing on 12x18 or smaller will be discarded. Also, during this time, the machine cannot receive a fax.

4. When the setting above is complete, start to print from the computer.

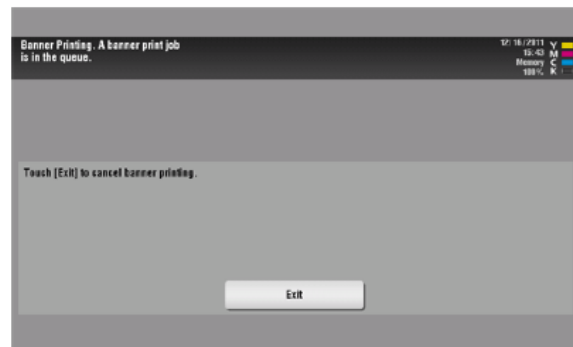

5. Open document and click **File** → **Page Setup**

6. Click the **Paper Size** Drop down and select **Manage Custom Sizes...**

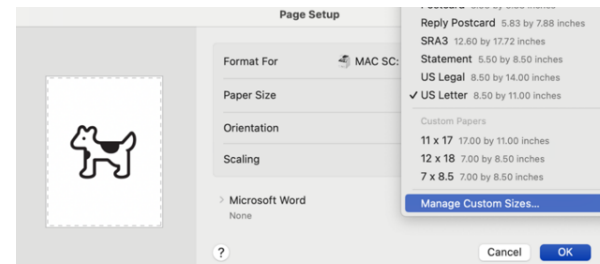


7. Click the **+** in the bottom left corner to add a new size.

- Enter banner dimensions and rename if desired.
 - Width: 11.69 inch (May vary)
 - Length: 45.24 inch (May vary)


8. Click **OK**.

9. Choose newly created custom size from the dropdown for **Paper Size**. Exit Page Setup.

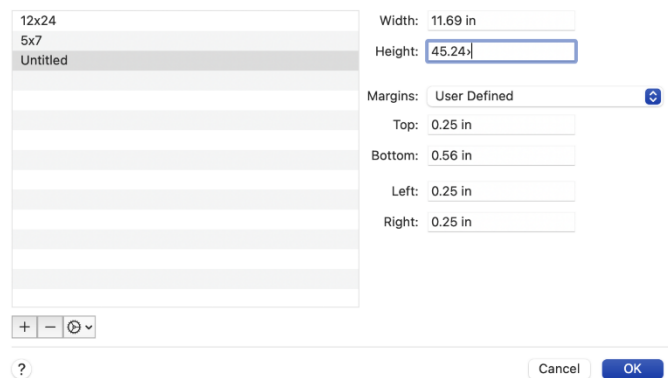




10. Go to **File** → **Print**, the updated size will now appear under **Paper Handling** → **Destination Paper Size**.

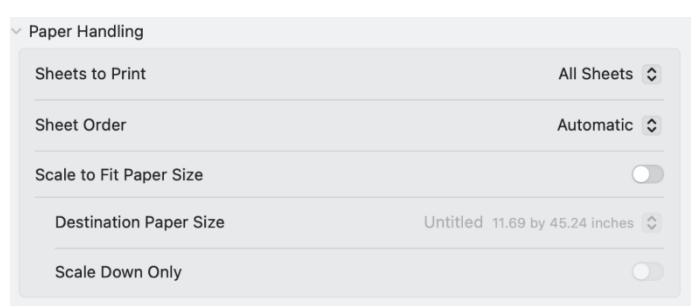

11. Scroll down to **Printer Options** → **Paper Tray/Output Tray** → Make sure **Bypass Tray** is chosen for **Paper Tray** and **Paper Type** matches what is in the machine.

- This should automatically be there due to the paper size.

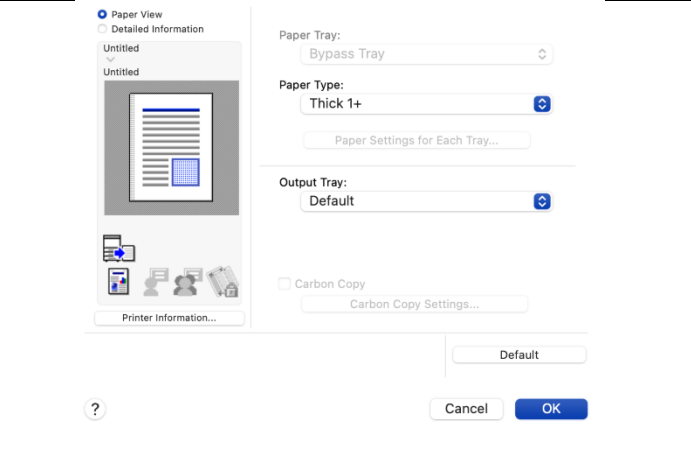


12. Select **OK** → Execute **Print**.

13. Load the banner paper into the **Bypass Tray**.

14. When the paper is loaded, select **Complete**. The banner will begin printing.



15. Select **Exit** to end banner printing.

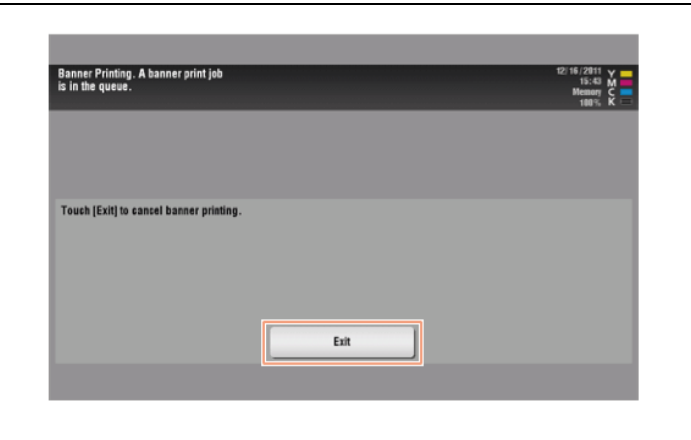



If using a Fiery print driver, the settings will be like below:

