

## Konica Minolta iSeries: Print Banners from PC

This guide will go over how to print on banner paper from a PC.

### Printing on Banner Paper

#### Printing on banner paper

This machine accommodates paper with a length of up to 47-1/4 inches (1,200 mm) in the **Bypass Tray**.




#### Printable paper

Paper width	Paper length	Paper weight
8-1/4 to 11-11/16 inches (210 to 297 mm)	18 to 47-1/4 inches (457.3 to 1200 mm)	33-13/16 to 55-7/8 lb (127 g/m <sup>2</sup> to 210 g/m <sup>2</sup> ) (Using the printer driver, select the paper type appropriate for the weight of the banner paper to be used.) 32-3/16 lb to 41-3/4 lb (121 g/m <sup>2</sup> to 157 g/m <sup>2</sup> ): Thick 1+, Thick 1+ (Side 2) 42 lb to 55-5/8 lb (158 g/m <sup>2</sup> to 209 g/m <sup>2</sup> ): Thick 2, Thick 2 (Side 2) 55-7/8 lb (210 g/m <sup>2</sup> ): Thick 3, Thick 3 (Side 2))

- #### Tips
- When printing data on banner paper, select a paper type appropriate to the banner paper using the printer driver. Then, the [Paper Tray] is set to [Bypass Tray] and [Resolution] is fixed to [600dpi].

1. On the Touch Panel of the machine, select **Utility** → **Banner Printing**.

2. Select **Allow**, then select **OK**.

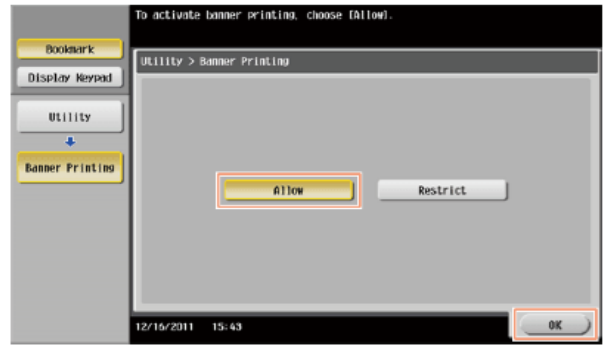


3. Check that the screen waiting for the banner printing job has appeared.

Note: If a job is received for printing on 12x18 and smaller while a banner print job is expected, that job is discarded.


Note: When a banner print job is queued, the machine cannot receive a fax.

When the setting above is complete, start to print from the PC.

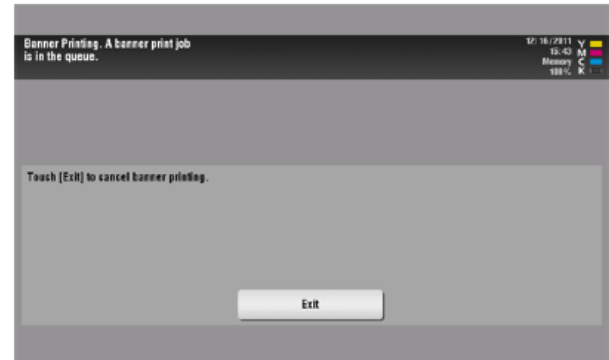


4. Go to **File** → **Print** → **Printer Properties** to open the print driver.


5. In **Original Size** in the **Basic** tab, select **Custom Size**.

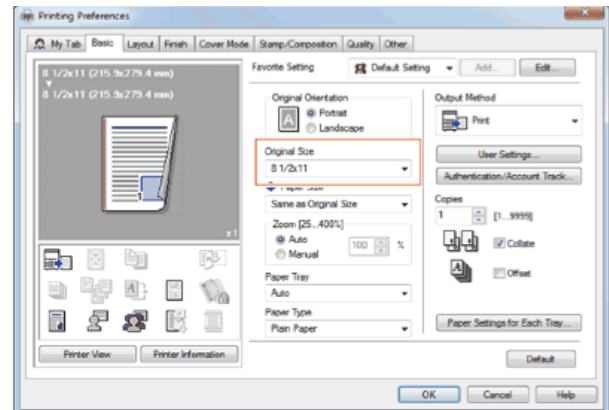

6. Specify the **Width** and **Length** of the banner paper and select **OK**.

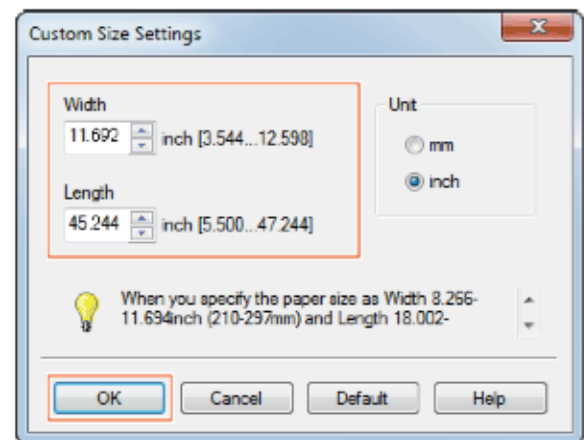


7. The **Confirm setting changes** dialog box will appear, select **Yes**.

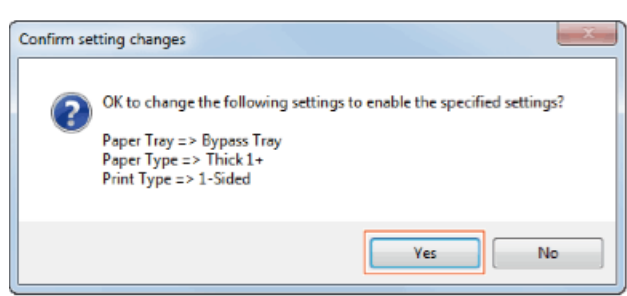


8. Execute Print.

9. Load the banner paper into the **Bypass Tray**.

10. When the paper is loaded, select **Complete**. The banner will begin printing.

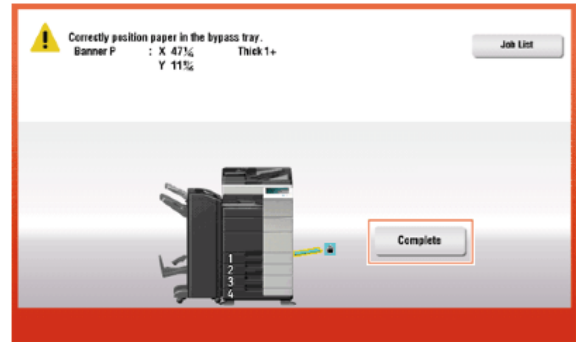

11. Select **Exit** to end banner printing.

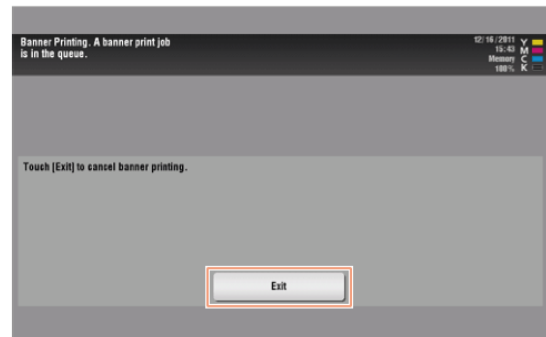

If using a Fiery print driver, the settings will be like below:

